
œ



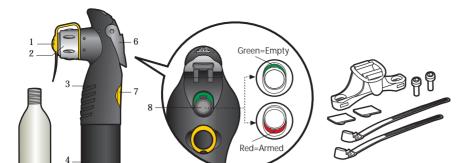

Important:

Use only Topeak 16g threaded CO₂ cartridges. Use of other brand CO₂ cartridges can cause malfunction and will void warranty.

- 1. Dust Cap
- 2. Valve Stem Barrel
- 3. Inflator Head
- 4. CO₂ Cartridge Cover
- 5. 16g Threaded CO₂ Cartridge (included)
- 6. CO₂ Regulator Handle
- 7. Safety Ring
- 8. Pressure Indicator



A. Check if CO2 cartridge is empty or armed by flipping up CO2 regulator handle to the position shown.



B. Inflate CO₂ cartridge by lifting CO₂ regulator handle as shown while indicator is in the red (armed) position.

Centerline Mount Bracket




Remove compression washer from CO2-Bra CO2 inflator and discard before first use.

HOW TO STORE CO2 CARTRIDGE



HOW TO REMOVE/REPLACE CO2 CARTRIDGE

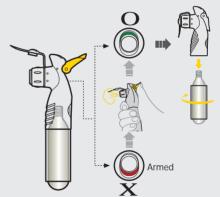





Do NOT attempt to remove CO₂ cartridge while indicator is in the red (armed) position.

DO NOT remove CO₂ cartridge if it is still charged with gas. Completely discharge the CO₂ cartridge before removal.

HOW TO INSTALL CO2 CARTRIDGE

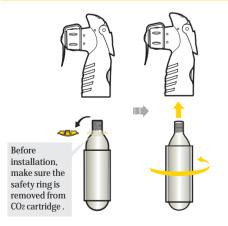


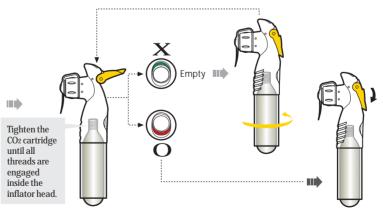

Tighten the CO2 cartridge until all threads are engaged inside the inflator head, then flip up the CO2 regulator handle.

A RED indicator will show the CO₂ cartridge is armed and ready for use.

HOW TO INFLATE CO2 CARTRIDGE

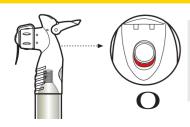

Before inflation, make sure the pressure indicator is RED.



If CO_2 gas does not flow properly, further tighten the CO_2 cartridge until all threads are fully engaged inside the inflator head so that the CO_2 cartridge is punctured correctly.


If using the CO2 inflator continuously, make sure to wait 20 seconds in between cartridges for the rubber grommet inside the inflator head to return to its original position.

Otherwise, a gas leak may occur and prevent proper inflation.



NOTE: MAKE SURE TO WEAR GLOVES AND INSTALL THE COVER ON THE CO2 CARTRIDGE BEFORE INFLATING TO AVOID INJURY.

Screw on for Schrader

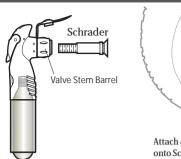



Attach and lock CO2-Bra CO2 Inflator onto Schrader valve stem by turning valve stem barrel clockwise




Gas will flow when the CO2 regulator handle is lifted and will stop when the regulator handle is released.



Flip CO2 regulator handle back down to the closed position. Remove CO₂-Bra CO₂ Inflator from Schrader valve stem by turning valve stem barrel counterclockwise.


The Valve Stem Barrel may become extremely cold/frosty when the CO2 gas is expelled. DO NOT try to unscrew the barrel until it has warmed sufficiently to touch and the CO₂ regulator handle is released.

Push on and pull off for Presta valve

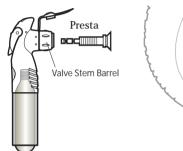






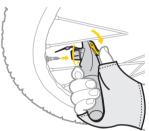

Flip CO2 regulator handle back down to the closed position. Remove CO₂-Bra CO₂ inflator from Presta valve stem by turning valve stem barrel counterclockwise.

HOW TO INSTALL CENTERLINE MOUNT BRACKET

Method 1

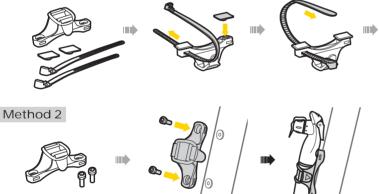









Make sure the safety ring is placed on the CO2 cartridge correctly when mounting CO2-BRA to bike



WARNING

- 1. If using the CO2 inflator continuously, make sure to wait 20 seconds in between cartridges for the rubber grommet inside the inflator head to return to its original position. Otherwise, a gas leak may occur and prevent proper inflation.
- 2. Tighten the CO2 cartridge until all threads are engaged inside the inflator head before using CO2 inflation function. Failure to do so will cause improper operation and may cause injury.
- 3. DO NOT remove CO2 cartridge if it is still charged with gas. Completely discharge the CO2 cartridge before removal
- 4. After each inflation, make sure all CO2 gas has been discharged by lifting the CO2 regulator handle
- 5. When opening the CO2 cartridge, point the inflator head away from yourself and others.
- 6. For your safety, make sure CO2 regulator handle is always flipped down in the closed position when not in use
- 7. DO NOT use CO2 Inflator if any part is cracked or broken.
- 8. DO NOT expose the CO2 cartridge to heat, or store at temperatures above 120°F (49°C), or store in enclosed vehicles.
- 9. Make sure to wear gloves and install the cover on the CO2 cartridge when inflating to avoid injury.
- 10. The Valve Stem Barrel may become extremely cold/frosty when the CO2 gas is expelled. DO NOT try to unscrew the barrel until it has warmed sufficiently to touch and the CO2 regulator handle is released.
- 11. Keep out of reach of children.

SPARE PART



6g Threaded CO: Cartridge (2 pieces Art no. TCOT-2



Cartridge (5 pieces Art no. TCOT-5

WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only. Warranty Claim Requirements

To obtain warranty service, you must have your original sales receipt. Items returned $% \left(x\right) =\left(x\right) +\left(x$ without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system $\,$ alteration, modification, or used in any way not intended as described in this manual.

* The specifications and design are subject to change without notice.

Topeak products are available only from professional bicycle shops. Please contact your nearest Topeak authorized bicycle dealer for any questions. For customers in the USA, call: 1-800-250-3068

Website: www.topeak.com Copyright © Topeak, Inc. 2010

M-TCBR-1-GB 01/10